


Schematic and Routing Diagram

Ignition System Wiring Circuit Diagram

S5RS0D1802001

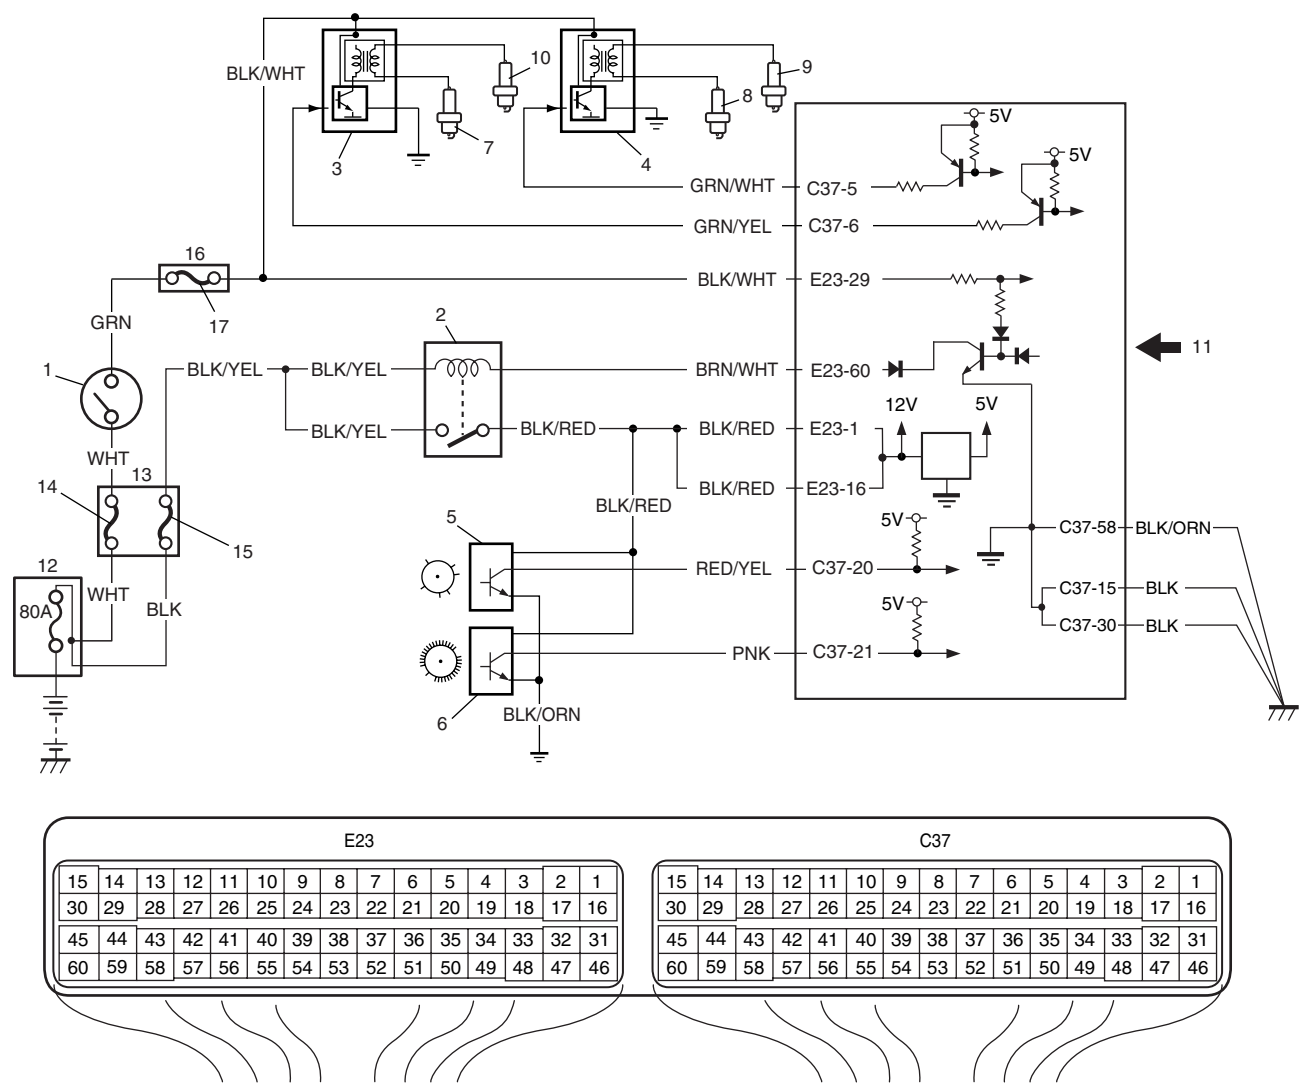

I4RS0A180001-01

1. Ignition switch	7. No.1 spark plug	13. Relay box
2. Main relay	8. No.2 spark plug	14. "IG ACC" fuse
3. Ignition coil assembly for No.1 and No.4 spark plugs	9. No.3 spark plug	15. "FI" fuse
4. Ignition coil assembly for No.2 and No.3 spark plugs	10. No.4 spark plug	16. Junction block assembly
5. CMP sensor	11. Sensed information (MAP sensor, ECT sensor, MAF and IAT sensor, TP sensor, Knock sensor, VSS, Electric load signal, Engine start signal)	17. "IG COIL" fuse
6. CKP sensor	12. Battery fuse box	